

Vacuum cleaner

User's manual

EN



SENCOR®

SVC 730RD / SVC 730GR

Translation of the original manual

Before first use, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this product for repair).

EN-1

Vacuum cleaner

SVC 730RD / SVC 730GR

CONTENTS

IMPORTANT SAFETY NOTICE	3
DESCRIPTION	6
ASSEMBLY	6
USING YOUR VACUUM CLEANER	6
STORAGE AND ACCESSORIES	8
MAINTENANCE AND CLEANING	8
TROUBLESHOOTING	9
TECHNICAL SPECIFICATIONS	10
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ..	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	10

IMPORTANT SAFETY NOTICE

READ CAREFULLY AND STORE FOR FUTURE USE.

- This vacuum cleaner may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use this vacuum cleaner in a safe manner and understand the potential dangers. Children must not play with the vacuum cleaner. Cleaning and maintenance performed by the user must not be performed by unsupervised children. Keep the vacuum cleaner and its accessories out of reach of children that are younger than 8 years of age.
- This vacuum cleaner is designed for use in households, offices and similar types of areas. Do not use in industrial surroundings.
- Do not expose the vacuum cleaner to direct sunlight and do not place it near an open fire or appliances that are a source of heat.
- Before connecting the power cord to a power socket, check that the technical details on the vacuum cleaner's rating label match the electrical voltage in the socket.
- Make sure the power cord is not touching a hot surface or sharp objects.
- Do not submerge the vacuum cleaner under water or any other liquid and do not rinse it under running water.

- Before turning on the vacuum cleaner, make sure that the dust bag is inserted inside and that the inflow micro-filter and the outflow filter are installed in their place.
- When the vacuum cleaner is running, ensure that the air outlets and the suction opening are not blocked.
- Do not use the vacuum cleaner to vacuum the following items:
 - smouldering cigarettes, burning items, matches or embers;
 - water and other liquids;
 - flammable or volatile materials;
 - sharp items, e.g. broken glass, needles, pins, etc.;
 - flour, wall plaster, cement and other building materials;
 - larger pieces of paper or plastic bags, which can easily block the suction opening.
- Vacuuming of some types of floors or floor surfaces can create an electrostatic discharge, which presents no danger to the user.
- Do not place the suction nozzle or tube against any parts of the face.
- Always turn off the vacuum cleaner and disconnect it from the power socket when leaving it without supervision, after finishing using it and before cleaning it.
- Disconnect the power cord from the power socket by pulling on the plug, never pulling on the cord. Otherwise, this could damage the power cord or the socket. Hold the power cord in your hand when winding it up.

Vacuum cleaner

SVC 730RD / SVC 730GR


EN

- In the event that the power cord is damaged, it must be replaced by an authorised service centre or by a similarly qualified person, this will prevent the creation of a dangerous situation. It is forbidden to use the vacuum cleaner if it has a damaged power cord.
- Do not use the vacuum cleaner if it is not working correctly, if it has been damaged or has been submerged in water. Do not repair the vacuum cleaner yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

Vacuum cleaner

SVC 730RD / SVC 730GR

DESCRIPTION

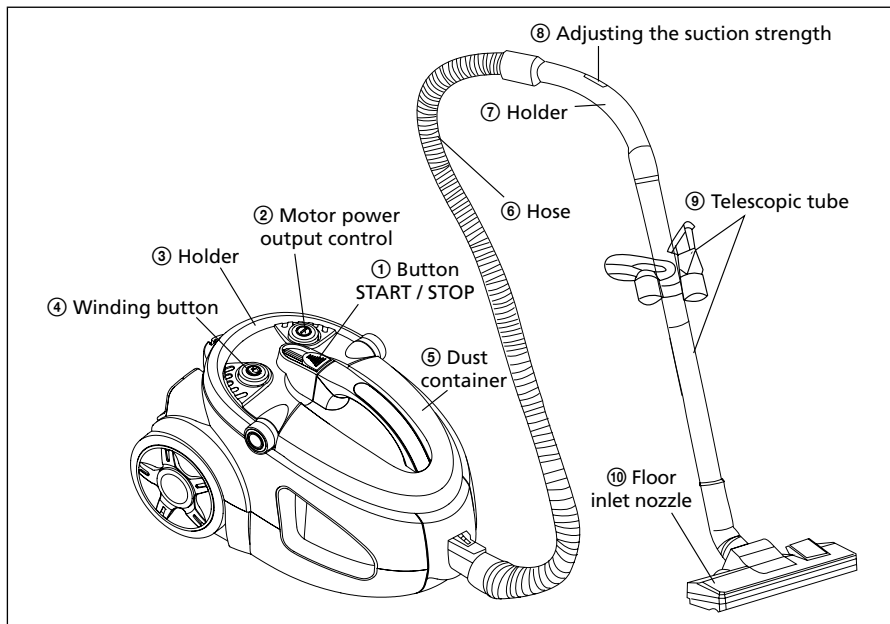

ASSEMBLY

Inserting the hose ⑥ into the air suction hole on the vacuum cleaner.

Press the safety button on the hose end and insert the hose end into the air suction hole on the vacuum cleaner until you hear „click“. The hose is now secured in correct position.

Place the holder ⑦ on the telescopic tube ⑨

Make sure to install the holder on the wider part of the telescopic tube.

Install the floor inlet nozzle ⑩ on the telescopic tube ⑨

Make sure to install the floor nozzle on the narrower part of the telescopic tube.

Adjust the length of the telescopic tube ⑨ as needed.

Adjust the length of the telescopic tube as follow: Move and hold the button on the tube forward as shown by arrows and adjust the length of the tube as needed. Release the button and move the tube little bit forward until you hear „click“. The telescopic tube is now securely set in position.

USING YOUR VACUUM CLEANER

Connecting your vacuum cleaner to power source – wall outlet

Pull the plug of the supply cable from the vacuum cleaner until the desired length of the cable is out of the appliance. Insert the plug to the wall outlet.

Vacuum cleaner

SVC 730RD / SVC 730GR

EN



Warning:

Yellow marking on the supply cable tells you that the cable is close to its end. Do not pull the cable more than to the red marking.

Adjusting the floor inlet nozzle ⑩ according to the floor surface.

You may set the inlet nozzle according to the floor surface by adjusting the inlet flap:

- If you want to vacuum carpets, close the bristles of the inlet inside the inlet nozzle, by turning the flap accordingly.
- If you want to vacuum hard and smooth surface, move the bristles out of the nozzle, by turning the flap accordingly.

Turning your vacuum cleaner on and off

To switch your machine on and off, press the START / STOP button ① on the vacuum cleaner body.

Adjusting the suction strength ⑧

The suction strength may be adjusted by moving the rider on the appliance body (small range) or by the moveable rider ⑥ on the hose handler.



Tip:

If the hose holder ⑦ on the hose ⑥ gets clogged during vacuuming, disconnect it from the telescopic tube ⑨ and also disconnect the hose ⑥ from the vacuum cleaner body. Then place the holder ⑦ inside the suction hole on the vacuum cleaner body and vacuum the stuck dirt out.

Temporary interruption of the vacuuming process

If you want to stop the vacuuming process temporarily, place the telescopic tube ⑨ in the parking position on the rear of your appliance, using the notch on the floor inlet nozzle ⑩



Warning:

Do not move the appliance from place to place if the hose is in the parking position! You may break the parking position holder!

Using your accessories

- The narrow slot nozzle may be used to vacuum in hard to reach spaces such as window frames, libraries, upholstery corners, joints, etc.
- Pillow nozzle may be used for bed vacuuming or upholstered furniture, etc.



Tip:

Use the narrow nozzle with brush to vacuum in hard to reach spaces that may be scratched easily!

Ending the vacuuming process

At first, switch the vacuum cleaner off by pressing the START / STOP button ① and then disconnect the supply cable plug from the wall outlet.

Hold the cable with one hand during the winding process. With your other hand press and hold the winding button ④. „Lead“ the cable towards the winding mechanism to protect the vacuum cleaner input area from damages.



Tip:

If the winding process stops and part of the supply cable is still outside, release the winding button ④ and pull the cable out again by about 50 cm and press the winding button again and repeat the winding process.

Vacuum cleaner

SVC 730RD / SVC 730GR

Carrying your vacuum cleaner

Your appliance may be carried from place to place by holding it by handle ③.



Warning:

Never try to carry your vacuum cleaner by holding the dust container handler ⑤!

STORAGE AND ACCESSORIES

Before storage you may disassemble your appliance to each individual part or you may store it assembled and with the telescopic tube ⑨ stored in one of the „parking“ positions (the rear or front position)

MAINTENANCE AND CLEANING

Emptying the dust container ⑤

Disconnect the hose ⑥ from the vacuum cleaner.

Pull the handle ③ up and remove the dust container ⑤.

Place the dust container ⑤ above a waste bin

Press the safety button underneath the suction opening ④ and the dust bottom will open.

Dust and dirt may be put in regular household waste.

Also remove the dust filter from the dust container ⑤. Turn the filter partially and empty the remaining dirt and dust from the filter to the waste bin as well.

Install the dust filter back to the dust container ⑤ and secure it in place by turning the filter to the opposite direction.

Close the bottom lid of the container ⑤. Make sure the safety lock button is engaged.

Place the dust container ⑤ back to the vacuum cleaner.



Warning:

Before installing the dust container ⑤ and the dust filter back to your appliance, make sure that both the container and the filter are completely dry.



Tip:

We recommend washing the dust container ⑤ and the dust filter under running, lukewarm water.

Replacing and cleaning of filters

Replacing the inflow H.E.P.A. filter

Remove the dust container ⑤ from the vacuum cleaner. Pull it up to release the safety lock on the filter cartridge and remove it out of the vacuum cleaner by tilting it to the side. Replace the filter cassette for a new one and click it back into place. Place the dust container ⑤ back into the vacuum cleaner.

Changing the outlet filter

Press the safety button on the filter grill and remove it by tilting it to the side. Change the filter for a new one. Then insert the ribbing together with the filter back into the vacuum cleaner.



Warning:

Make sure to put the filter in the vacuum cleaner with the plastic grill facing out!

Vacuum cleaner

SVC 730RD / SVC 730GR

EN

Cleaning of filters

All filters inside the vacuum cleaner are washable. If they are soiled wash them under running lukewarm water. If the filters are so soiled that washing does not help, replace with new filters. Before placing the filter back into the vacuum cleaner ensure that it is completely dry.



Warning:

The vacuum cleaner is equipped with a heat safety fuse, which in the case of over-loading (e.g. blocked filters) will turn it off. The vacuum cleaner may then only be switched on once it has cooled. **For this reason carry out regular cleaning, i.e. replace filters – this will extend the life of your vacuum cleaner.**

Cleaning your vacuum cleaner.

Use only clean, soft and dry cloth. However, you may dip the cloth slightly into water. Do not use aggressive solutions or paint thinners!

TROUBLESHOOTING

Before you decide to contact authorized service centre, read these following tips in the troubleshooting chart:

Problem	Possible cause	Recommended action
The engine will not start	<ul style="list-style-type: none">- The supply cable is not connected correctly in the wall power outlet.- The wall power outlet is damaged.- The vacuum cleaner is not switched on.	<ul style="list-style-type: none">- Inspect the supply cable plug. Make sure that it is firmly inserted in the wall outlet.- Inspect the wall outlet.- Turn the appliance on.
The suction output is insufficient	<ul style="list-style-type: none">- Vacuum cleaner or its air passageways are clogged with dirt or foreign object.- The dust filter needs cleaning.- The dust container ⑤ has been installed incorrectly, or in wrong position.- Filter is clogged.	<ul style="list-style-type: none">- Remove the clogging or foreign object.- Clean the dust filter.- Close the dust container ⑤.- Clean the filter.
The cable is not wound in completely.	The cable may have slipped down from the winding pulley during winding.	Hold the cable during the winding. Make sure to apply slight tension (by pulling the cable back) to the cable during the winding process.
The cable cannot be pulled out.	The cable is wound up incorrectly	Press the winding button ④ and try to rewind the cable again.
The speed control is not working.	The appliance has been broken down.	Have the vacuum cleaner repaired by technician. (only by qualified technician)
The supply cable starts to wind in when you do not need that.	The winding mechanism has broken down.	Have the vacuum cleaner repaired by technician. (only by qualified technician)
The dust container ⑤ cannot be closed.	The dust filter is installed incorrectly or in incorrect position.	Reinstall and secure the filter in position and try again.

Vacuum cleaner

SVC 730RD / SVC 730GR

TECHNICAL SPECIFICATIONS

Voltage	220–240 V
Nominal frequency:	50–60 Hz
Rated power input:	800 W
Protective class (with regards to protection from electric shock):	II
Noise level	76 dB(A)
Supply cable length	5 m
Operational range	7,5 m
Dust container capacity	1,5 l
5 times filtrating system (inlet H.E.P.A filter)	
Weight	5,8 kg

The declared noise emission level for this appliance is 76 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

Changes in text and technical parameters reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.